



10x10 Rigid Pop Up Tent Instructions


1. Place the tent frame in desired location and carefully pull the outer frame legs partially with a second person assisting on the opposite side.

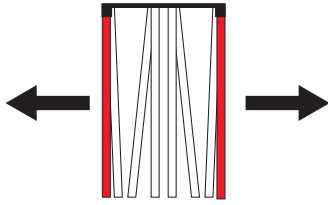


2. Place the tent top over the partially open frame, align the four corners, and attach Velcro at the corners. Lift the frame by the lower part of the truss until the frame is partially open.

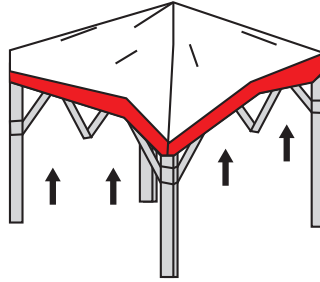

3. Lock the slider bracket into place by holding frame with one hand and lifting the slider bracket up into place until it securely locks.

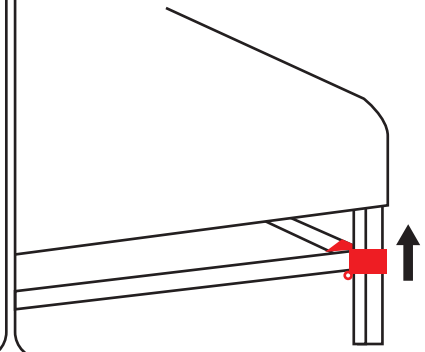

4. Lift each leg and slowly pull out inner leg until it pops into place. Repeat with each leg and adjust height by using push pin.

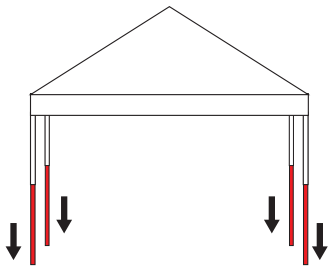


Important Notes

1. Always use tie-downs, stakes and/or weight bags to secure canopy.
2. DO NOT set-up or leave your canopy setup in hail, sleet, snow, lightning, strong winds or any harsh weather conditions.
3. It is recommended to remove canopy top from the frame after take down. Storing top on frame may result in excessive wear and tear that is not covered under warranty.
4. Use a diluted detergent and clean by hand for top cleaning. Never clean in a washing or drying machine. Let dry completely before storage.
5. Your canopy is designed as a temporary shelter and not to be used as a permanent structure.


Additional Instructions for Optional Parts

Side Wall Instructions


1. Attach the sidewall clamp to both legs on either side with clamp facing towards opposite leg.

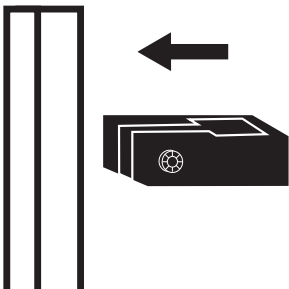


2. Push the sidewall pole through the sleeve of the side wall fabric.

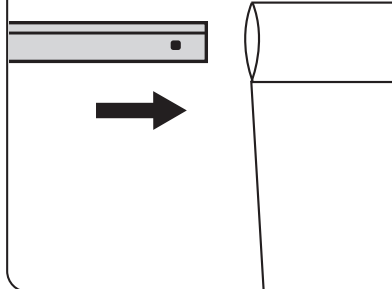

3. Push the pole with the fabric sleeve around it into the sidewall clamp. Tightening the clamp through the hole in the pole.

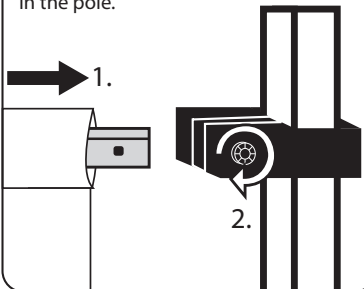


4. Attach the Velcro strips together to tie the side wall to the leg of the tent.

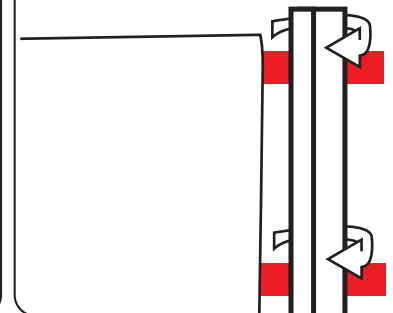


Back Wall Instructions

1. Make sure the legs of the tent are fully extended to as far up as they can.

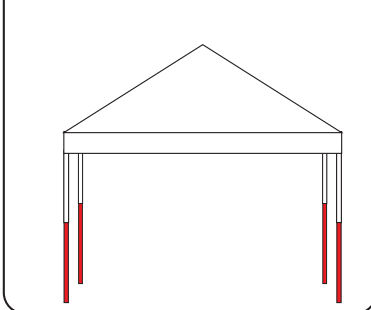

2. Attach the top of the Velcro backwall to the inside of the tent canopy.

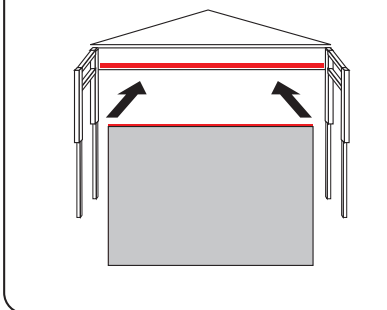

3. Attach the Velcro strips together to tie the back wall to the legs of the tent.

